

**Technical Service Bulletin**

## 6485-001 PBE, Neck piece installation instruction

<b>ISSUE DATE:</b>	DEC 15, 2014	<b>TSB NUMBER</b>	TSB-14-008
--------------------	--------------	-------------------	------------

<b>HAZARD / URGENCY RATING</b>	
	<b>DANGER – Injury possible if TSB not observed or followed</b>
	<b>WARNING – Product damage possible if TSB not observed or followed</b>
<b>X</b>	<b>CAUTION – Essential issue affecting operation, service, or parts</b>
	<b>INFORMATIONAL – Advisory which may be of interest</b>

**APPLICATION:**

This Technical Service Bulletin applies to 6485-001 PBE manufactured by Tulmar.

**SUMMARY:**

This Technical Service Bulletin is to give instructions on how to properly fasten the neck piece to the PBE hood.

**IMPACT:**

Proper fastening of the neck piece to the hood will assure the neck piece stays in place when a user is putting on the hood.

**ACTION:**

The neck piece collar mates with the hook fastener band located inside the hood. The neck piece collar is positioned toward the inside of the PBE hood with the hole for the head located closest to the back of the hood.

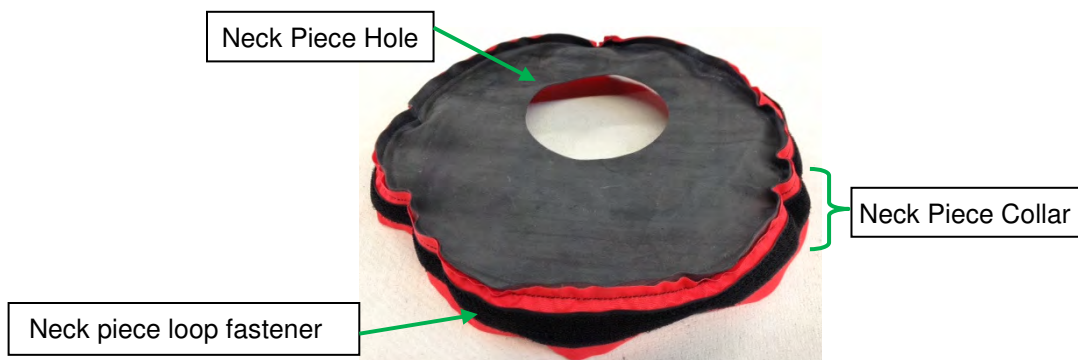


Figure 1: Neck piece

When mating the neck piece's loop fastener with the PBE hood's hook fastener, carefully align the two fastener strips and press firmly together to ensure a strong attachment.

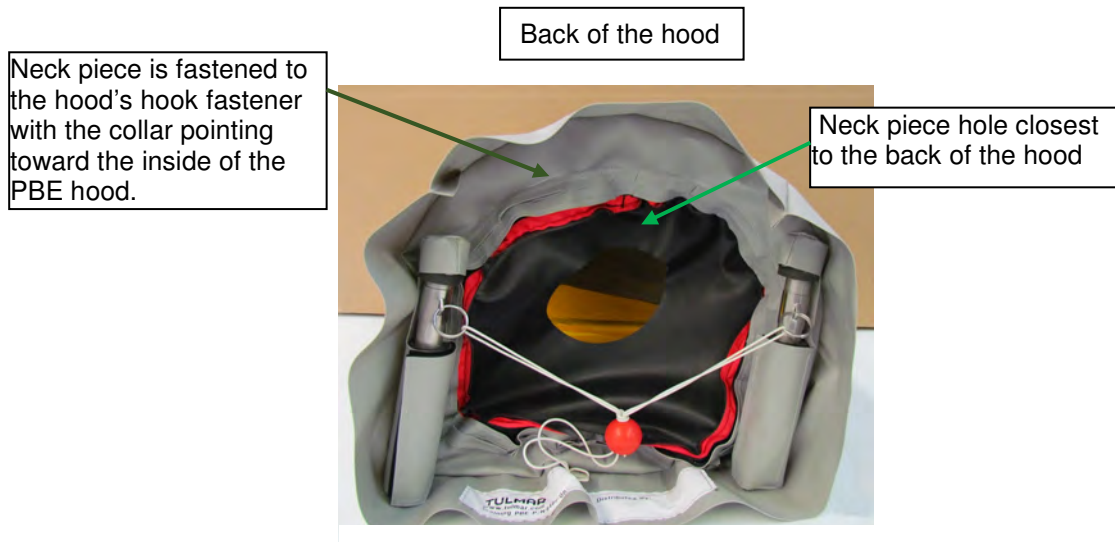


Figure 2: 6485-001 PBE Assembly

Pictures below presents a closer view of how to install the neck piece. Figure 4 below shows a neck piece cut in half and fastened to the hood.



Figure 3: Neck piece Fastened to the hood



Figure 4: Neck piece cut in half

**CONTACT:**

Please contact Tulmar Customer Service Department at (613) 632-1282 x 240 or by e-mail to [inflight@tulmar.com](mailto:inflight@tulmar.com)